

 
# DOOR MIRROR

< ON-VEHICLE REPAIR >

[WITH ADP]

4. Base cover

5. Door mirror cover

 : Pawl

## DOOR MIRROR ASSEMBLY : Removal and Installation

INFOID:000000001766531

### REMOVAL

1. Remove the door finisher. Refer to [INT-11, "Removal and Installation"](#).
2. Remove the corner cover.
3. Disconnect the door mirror harness connector.
4. Remove the door mirror mounting nuts, and remove the door mirror assembly.

### INSTALLATION

Install in the reverse order of removal.

## DOOR MIRROR ASSEMBLY : Disassembly and Assembly

INFOID:000000001766532

### DISASSEMBLY

1. Remove the pawls and disassemble the base cover.
2. Remove the glass mirror. Refer to [MIR-51, "GLASS MIRROR : Disassembly and Assembly"](#).
3. Remove the mirror cover. Refer to [MIR-52, "DOOR MIRROR COVER : Disassembly and Assembly"](#).
4. Remove the screws and mirror actuator from the housing assembly.

### ASSEMBLY

Assemble in the reverse order of disassemble.

#### **CAUTION:**

**After installation, visually check that pawls are securely engaged.**

## GLASS MIRROR

### GLASS MIRROR : Exploded View

INFOID:000000001831176

### DISASSEMBLY

