

# DOOR MIRROR

< ON-VEHICLE REPAIR >

[WITH ADP]

- |                    |                         |                 |
|--------------------|-------------------------|-----------------|
| 1. Mirror assembly | 2. Door mirror actuator | 3. Glass mirror |
| 4. Base cover      | 5. Door mirror cover    |                 |

 : Pawl

## GLASS MIRROR : Disassembly and Assembly


INFOID:000000001831181

### DISASSEMBLY

1. Remove the pawls and disassemble the base cover.
2. Place the glass mirror upward.
3. Put a strip of protective tape (B) on housing assembly.
4. As shown in the figure, insert a small slotted screwdriver (A) into the recess between glass mirror (1) and actuator (2). Push up two pawls (3) to remove glass mirror lower half side.

#### NOTE:

- When pushing up pawls do not attempt to use one recess only. Be sure to push up with both recesses.
- Insert screwdriver into recesses, and push up while rotating (twisting) to make work easier.

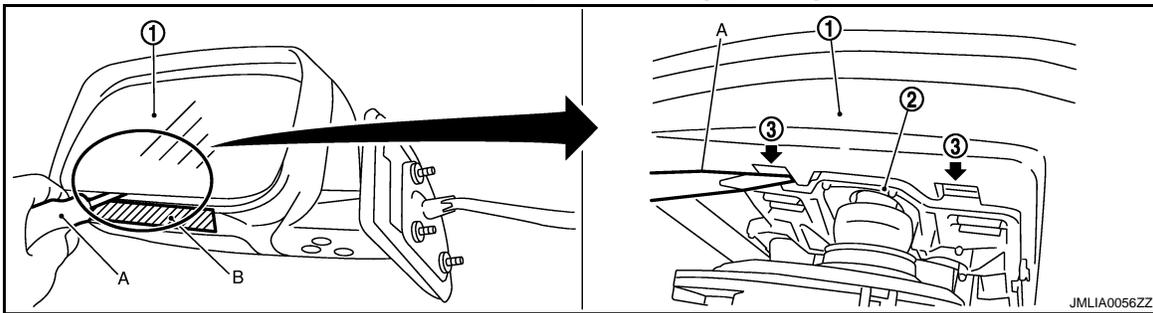

5. Remove two terminals of mirror heater attachment.
6. Lightly lift up lower side of glass mirror, and detach two pawls of upper side as if pulling it out. Disassemble glass mirror from actuator.

#### NOTE:

Be certain not to allow grease on sealing agent in center of mirror or back side of glass mirror.

### ASSEMBLY

Assemble in the reverse order of disassemble.

#### CAUTION:

After installation, visually check that pawls are securely engaged.

## DOOR MIRROR COVER

### DOOR MIRROR COVER : Exploded View

INFOID:000000001831192

### DISASSEMBLY

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

MIR